


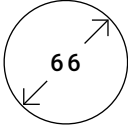

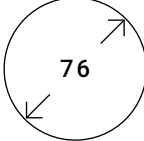
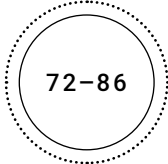
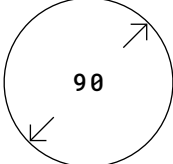
# Circle Installation Instructions

ISOLAT  
SUPPLY  
MOVING  
PAN



## 1 What diameter cut-out do you need?

Refer to the cut-out diameter listed in your downlight instruction manual to determine which BeadMaster product you need.

LISTED CUT-OUT DIAMETER (MM)	BEADMASTER PRODUCT	REQUIRED CUT-OUT DIAMETER FOR PLASTERBOARD (MM)
	BeadMaster Circle 62	Minimum = 66 Maximum = 75 
	BeadMaster Circle 72	Minimum = 76 Maximum = 85 
	BeadMaster Circle 86	Minimum = 90 Maximum = 99 

NOW YOU'RE READY TO INSTALL (PT0) 

2



Push wires centrally into recess and staple BeadMaster cover plate in place.

3



Plaster over the product and skim to a thickness of 2.5mm.

4



Locate and tap lightly with the head of a screwdriver (or similar) on central area which will loosen the plaster on the face of the bead. Continue until the cut line is visible.

5



Remove the central area with a sharp hooked blade knife (or hole saw), being careful to avoid any wires within.

6



Install downlight as per manufacturer's instructions. **Your snag-free installation is now complete.**

## Get in touch



Please get in touch if you want to learn more about our products or have any other questions.

EMAIL ADDRESS

**sales@beadmaster.co.uk**

 @beadmasteruk

